

Clearview Balustrade System

Fitting Instructions



Component List

- 7 x Clear tempered safety glass panels (820mm x 152mm x 8mm)
- 2 x Carrying rails (1795mm)
- 1 x Capping rail (1795mm)
- 4 x Carrying rail infill (900mm)
- 4 x Clear rail fixing brackets


Tools Required:

- Drill
- Adhesive
- Saw
- Spirit Level
- Tape Measure
- Pencil



All images are for illustration only. Please see individual item listings for actual item specifications.

Page 1 of 5

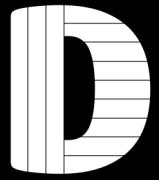

Install The Newel Posts

Step 1

Measure out and set the posts the required rail length.
On our kits, this would be 1.795m apart.



Step 2


Install the first baserail bracket onto the first newel post. Choose a suitable height that you prefer, making sure that there will be enough height left to install the top rail once the glass panels are fitted. Note the height of the glass pieces to be 895mm.

Secure the second baserail bracket to the other newel post, at exactly the same height as the first bracket. Use a tape measure, pencil and spirit level to help you here.



Clearview Balustrade System


Fitting Instructions

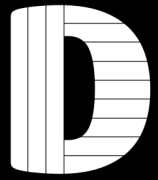

Cutting Down the Infill


Step 3


Cut down the infill pieces to be 81.2mm long, to fit between the glass panels on the hand + base rails. You would need 18 pieces in total.

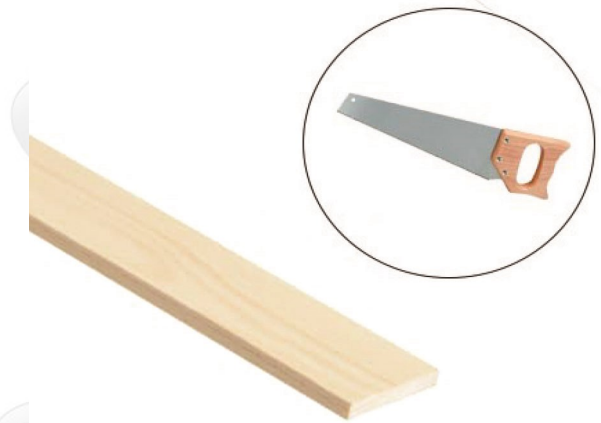

Step 4

Secure the infill on the left and right hand side of the rails and run another infill every 152mm for the other 7 pieces. These would be secured by using an adhesive.

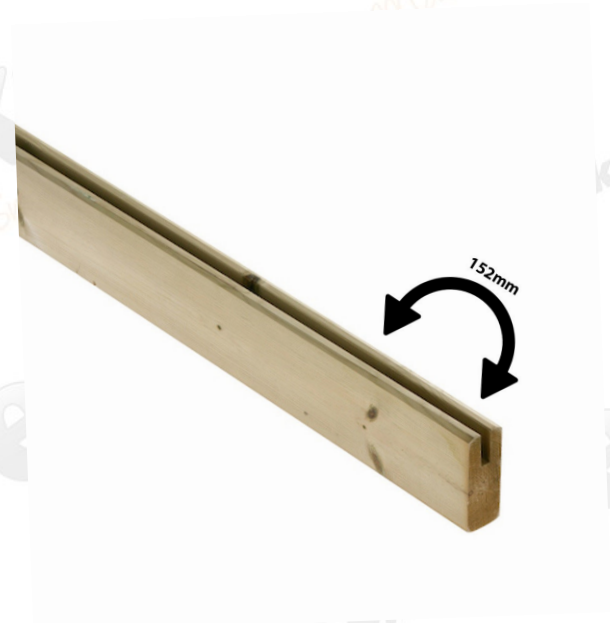

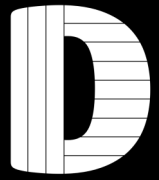

Inserting Glass Panels

Step 5

Install the baserail into the brackets and use your spirit level to make sure this finishes completely flat.



Step 6

Insert the glass panels into the slotted bottom baserail that you prepared in step 4.





Handrail Installation

Step 7

Next, insert the handrail with the brackets on either side onto the top of the glass panels. Once all of the glass is slotted into the top rail, confirm this is completely flat with a spirit level and secure the top brackets into the newel posts.



Step 8

Apply a quality adhesive into the underneath of the capping rail, and ensure this is held down onto the handrail to set.



Clearview Balustrade System

Fitting Instructions



Enjoy your new Clearview Balustrade!

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 6 of 5