


Step Stringers

Your step stringers must be set at a maximum of 600mm apart

Use a 50mm truss clip on each stringer to attach them to your decking frame.
See Page 2 for detailed instructions!

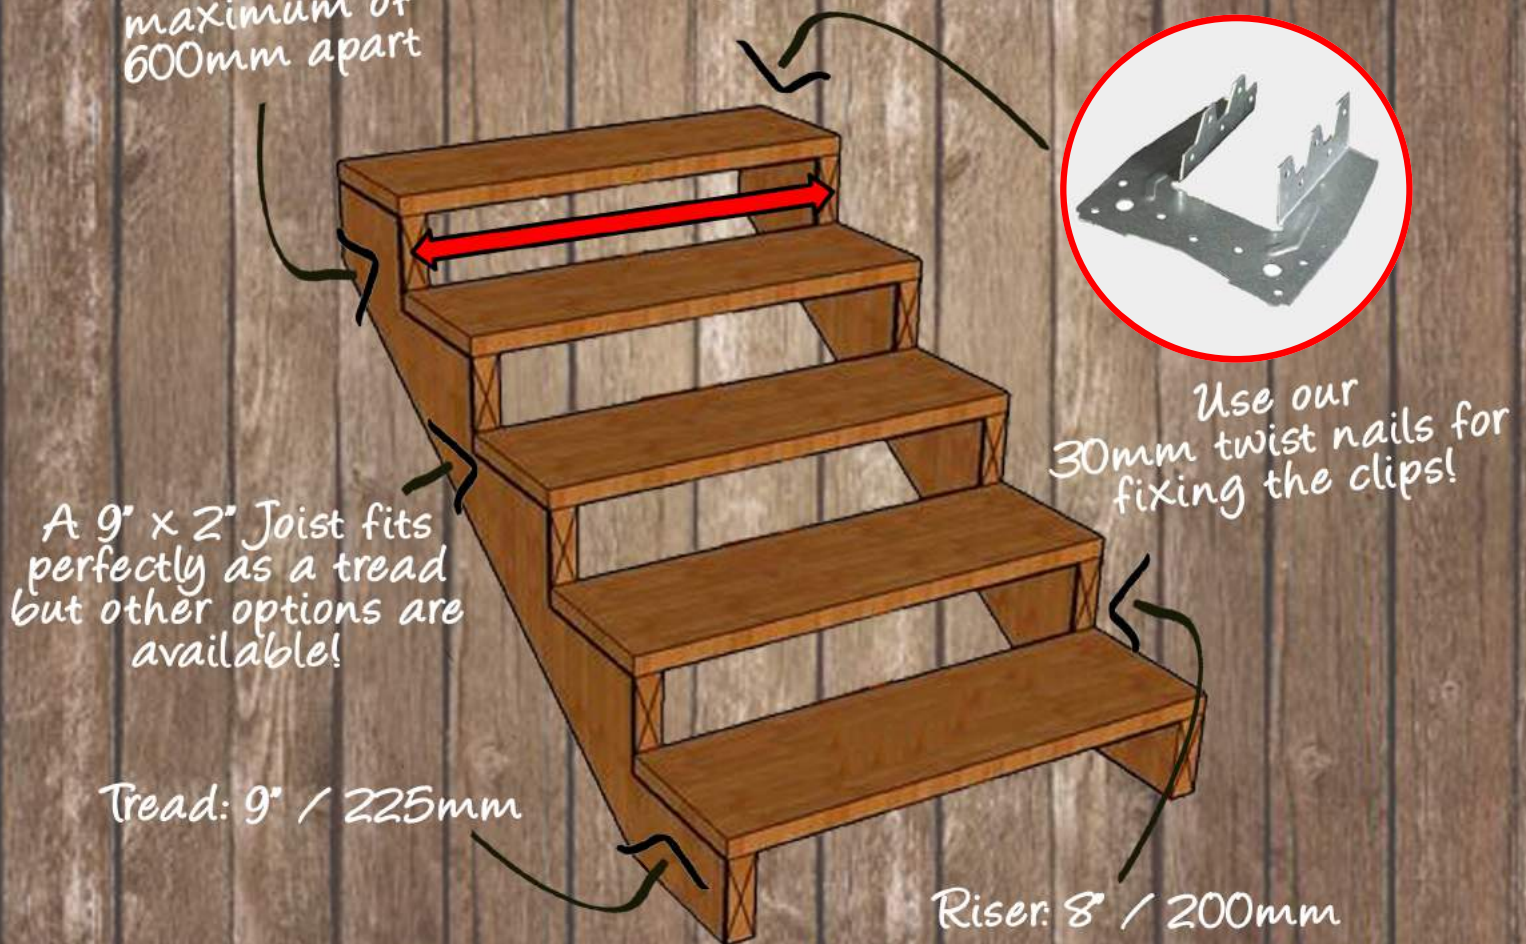


Top Tip: Screw in to the back of your deck joist, through the stringer (top and bottom) of each of the stringers using a joist screw to add extra strength to your structure!

Need a hand?

Speak to our sales team
0844 474 4444

eDecks.co.uk

Make Your Garden Smile :)

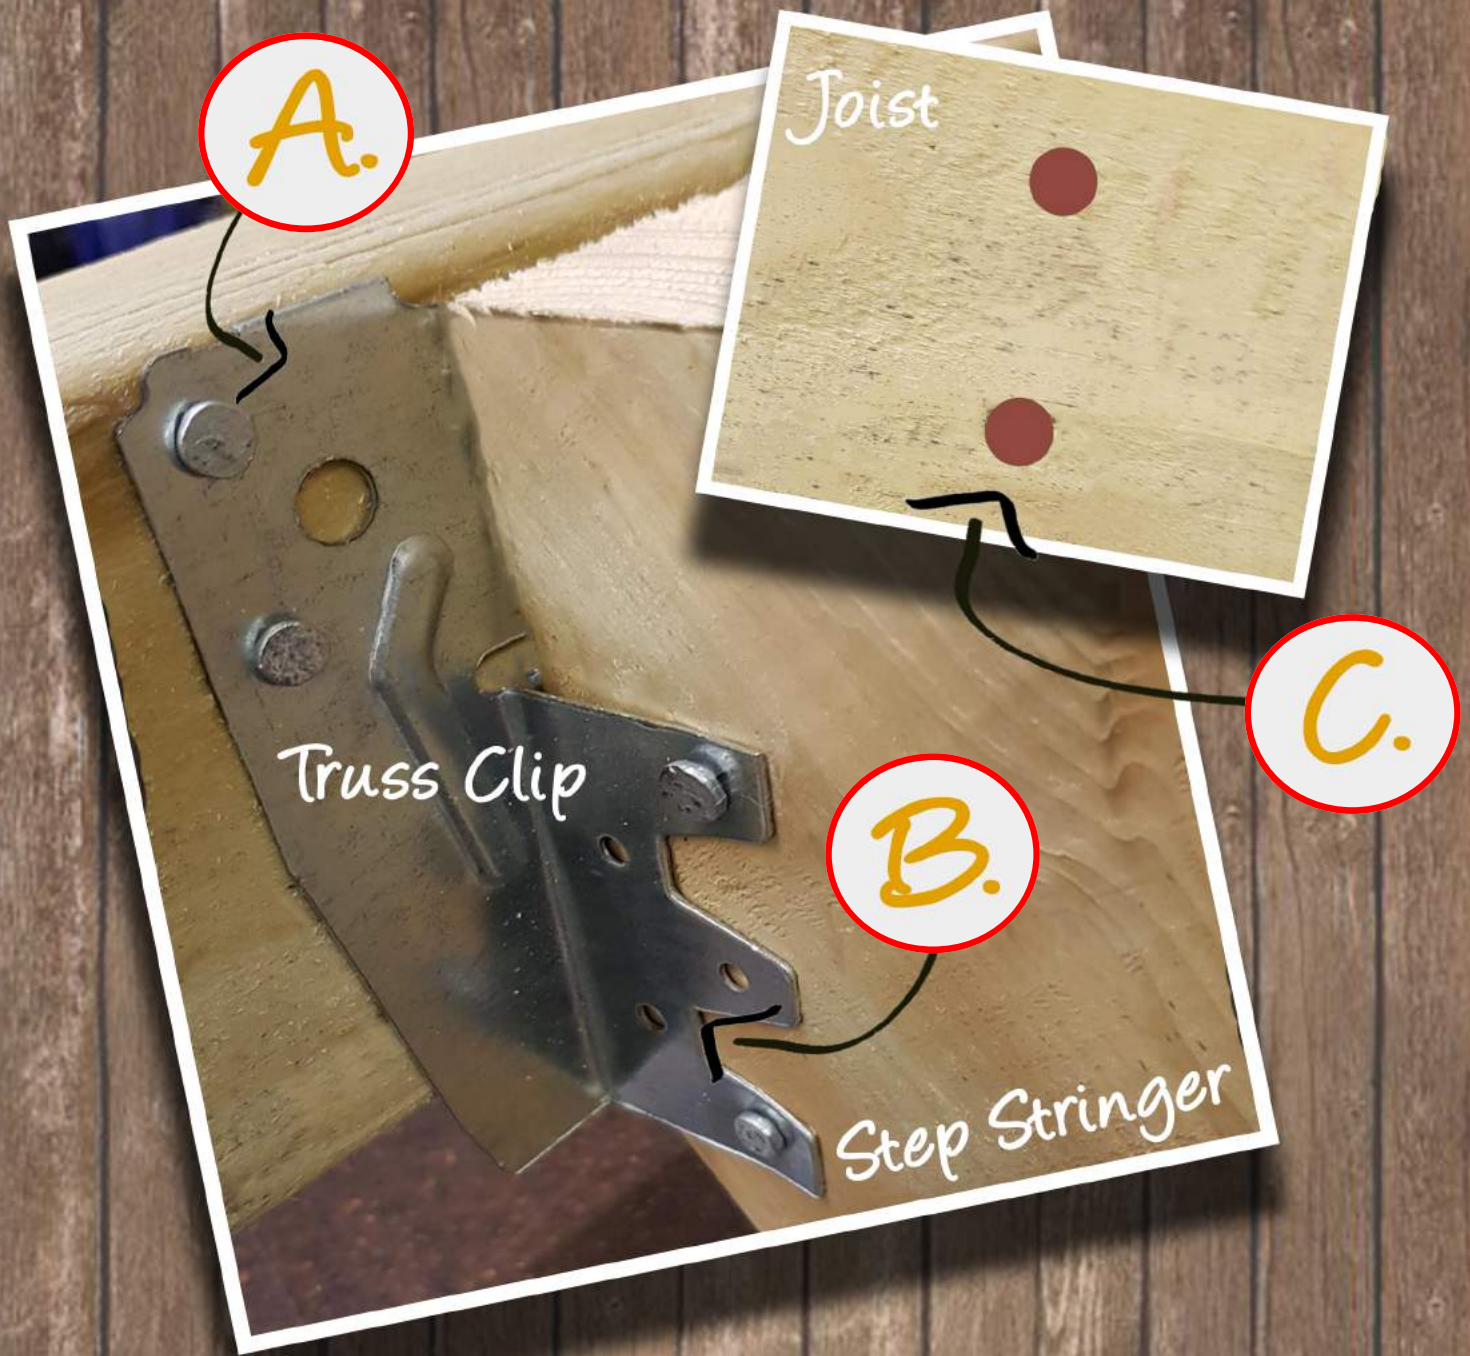

A. Start by fixing the truss clip on to your joist as shown in the diagram above, making sure the top of the clip is flush with your joist. Use twist nails to secure.

B. Keeping the top of the step stringer flush with your joist fix the stringer in to the truss clip, again using twist nails as shown.

C. Screw through the back of the joist in through the step stringer to add strength to your structure as shown.

It is recommend for the larger step stringers to use 3 x 2 timber as bracing to connect the two stringers together to give it more solidity.


Dimensions ...



2 Step Stringer
Overall Height: 16"
Overall Length: 18"




3 Step Stringer
Overall Height: 24"
Overall Length: 27"

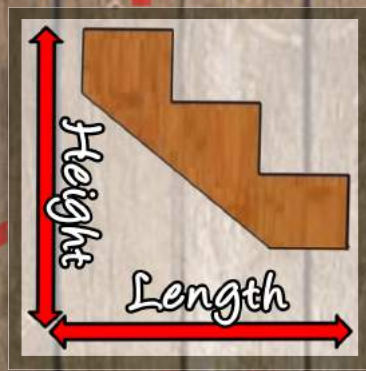

4 Step Stringer
Overall Height: 32"
Overall Length: 36"



5 Step Stringer
Overall Height: 40"
Overall Length: 45"

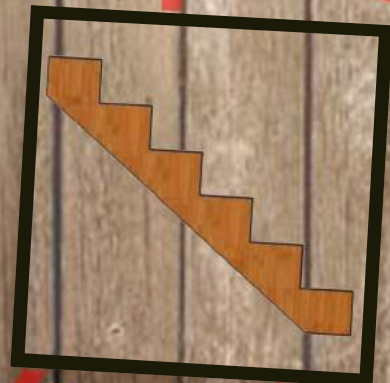

6 Step Stringer
Overall Height: 48"
Overall Length: 54"



7 Step Stringer
Overall Height: 56"
Overall Length: 63"



8 Step Stringer
Overall Height: 64"
Overall Length: 72"